


SS-209 WITH PIEZO BUZZER

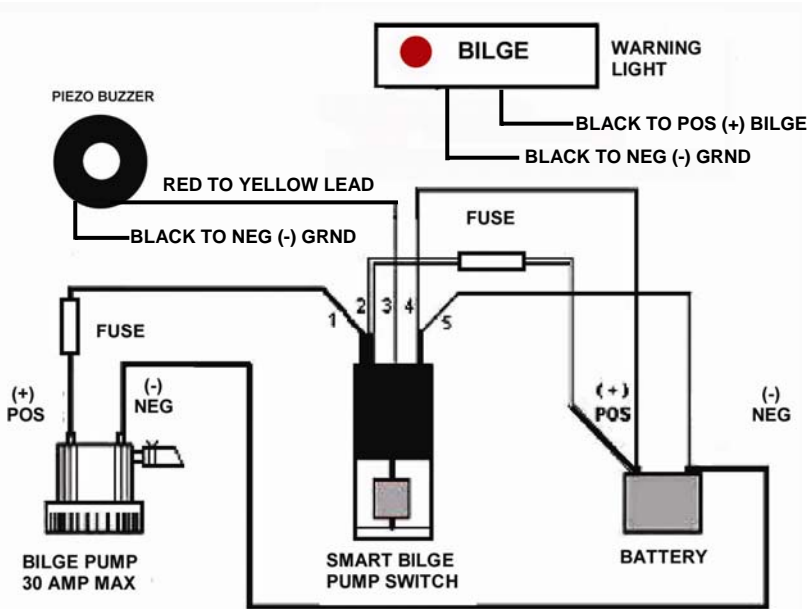

NOTE: USE PUMP MFG RECOMMENDED WIRE SIZE AND FUSE AMP RATING

LEGEND

1. BLACK 14 GAUGE (LARGE BLACK WIRE) TO POS (+) SIDE PUMP MOTOR
2. WHITE 14 GAUGE WIRE TO POS (+) POLE BATTERY
3. YELLOW 18 GAUGE WIRE TO RED LEAD PIEZO BUZZER
4. RED 18 GAUGE WIRE TO POS (+) POLE OF BATTERY
5. BLACK 18 GAUGE (SMALL BLACK WIRE) TO NEG (-) POLE OF BATTERY

FUNCTIONS:

Activates pump when water causes float to rise.

Red light activates when pump is running

Piezo Buzzer is activated when pump runs longer than two minutes


Pumps extra 15 seconds when float drops to insure bilge is dry.

Audible devices can be connected in parallel with the Warning Panel

TO TEST AFTER INSTALLATION:
Raise the float to activate pump

Aqualarm
619-575-4011

SS-209 WITHOUT PIEZO BUZZER

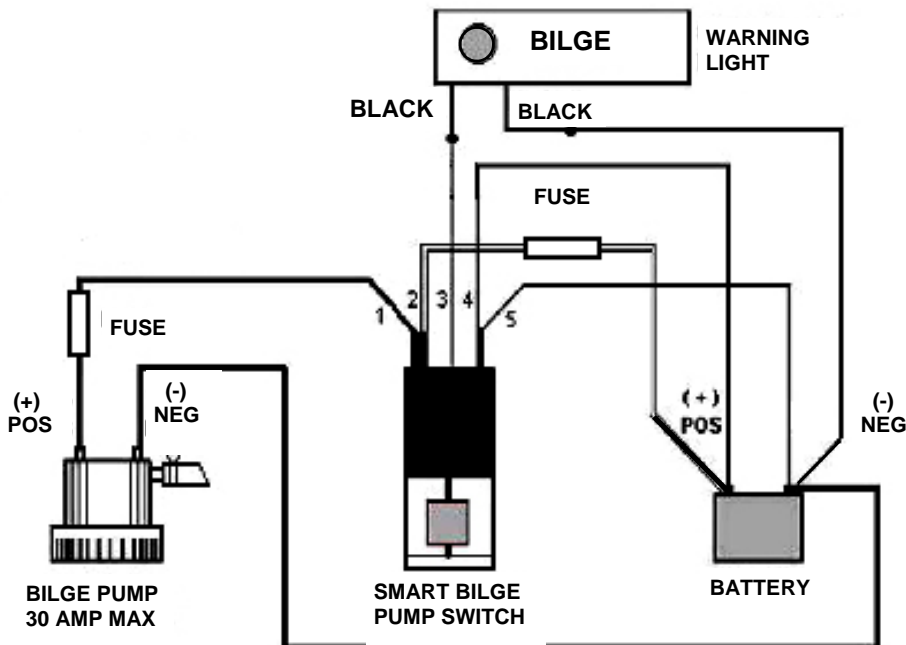

NOTE: USE PUMP MFG RECOMMENDED WIRE SIZE AND FUSE AMP RATING

LEGEND

1. BLACK 14 GAUGE (LARGE BLACK WIRE) TO POS (+) SIDE PUMP MOTOR
2. WHITE 14 GAUGE WIRE TO POS (+) POLE BATTERY
3. YELLOW 18 GAUGE WIRE TO RED WIRE ON BILGE WARNING PANEL
4. RED 18 GAUGE WIRE TO POS (+) POLE OF BATTERY
5. BLACK 18 GAUGE (SMALL BLACK WIRE) TO NEG (-) POLE OF BATTERY

FUNCTIONS:

Activates pump when water causes float to rise.

Pumps extra 15 seconds when float drops to insure bilge is dry.

Activates Red Light when pump runs longer than two minutes.

Audible devices can be connected in parallel with the Warning Panel

TO TEST AFTER INSTALLATION:
Raise the float to activate pump

Aqualarm
619-575-4011